




> Surge protection

> Practical examples of overvoltage protection

> Apartment blocks

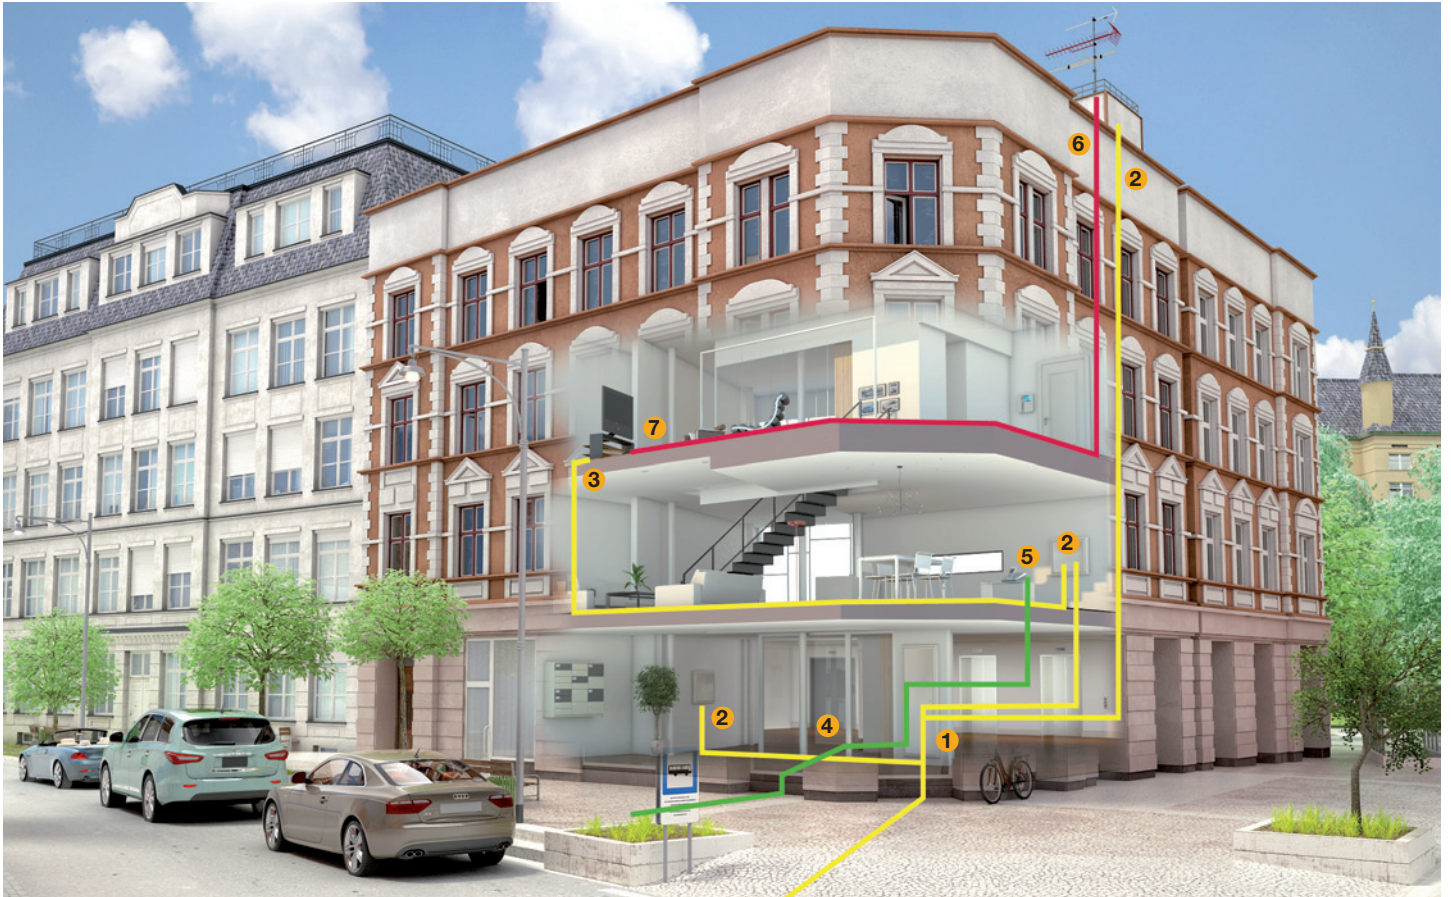

Power supply

Counter room TYPE 1 (direct effects of lightning)	1	ATCOMPACT CDA
Shared areas (elevator) + apartment TYPE 2 (attenuated effects of lightning)	2	ATCONTROL /R T
	2	ATCONTROL /R M
Apartment TYPE 3 (attenuated electromagnetic effects)	3	ATSOCKET / ATPLUG

Telecommunication and data

TYPE 2 and 3 (coordinated)	4	ATFONO KRONE
	5	ATFONO RJ11
	6	ATFREQ F
	7	ATFREQ TV